


PIXELBLADE 7

7x15W 4IN1 Continuous Rotation LED Pixel Bar

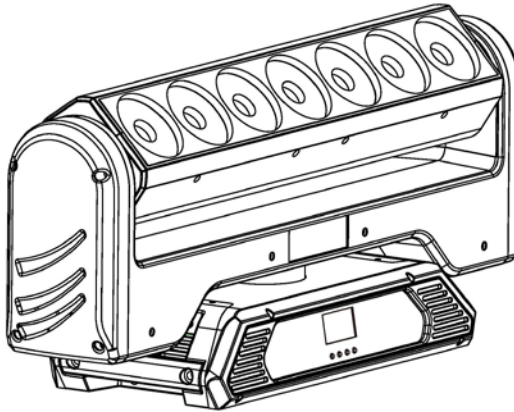

This product manual contains important information about the safe installation and use of this projector. Please read and follow these instructions carefully and keep this manual in a safe place for future reference.

User manual

Please read the instructions carefully before use

TABLE OF CONTENTS

- 1.Safety Instruction 2
- 2.Technical Specification 4
- 3.How to Control The Devicee 5
- 4.Diagram.....12
- 5.Trouble Shooting13
- 6.Fixture Cleaning.....14

STATEMENT

The product has well capability and intact packing when leave factory. All of the user should comply with warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can not be responsible for any malfunction & problem owing to ignore the manual.

1.Safety Instruction

Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.

Unpack and check carefully there is no transportation damage before using the unit.

Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.

It's important to ground the yellow/green conductor to earth in order to avoid electric shock.

The unit is for indoor use only. Use only in a dry location.

The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.

Disconnect main power before replacement or servicing.

Make sure there are no flammable materials close to the unit while operating as it is fire hazard.

Use safety cable when fixes this unit. DO NOT handle the unit by taking its head only, but always by taking its base.

Maximum ambient temperature is T_a : 40°C. DO NOT operate it where the temperature is higher than this Unit surface temperature may reach up to 85°C. DO NOT touch the housing bare-hand during its operation. Turn off the power and allow about 15 minutes for the unit to cool down before replacing or serving.

In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.

DO NOT touch any wire during operation as high voltage might be causing electric shock.

WARNING:

To prevent or reduce the risk of electrical shock or fire, do not expose the unit to rain or moisture.

DO NOT open the unit within five minutes after switching off.

The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.

CAUTION:

There are no user serviceable parts inside the unit. DO NOT open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact your nearest dealer.

INSTALLATION:

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. And make sure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture. The equipment must be fixed by professionals. And it must be fixed at a place where is out of the touch of people.

2. Technical Specification

Power Voltage: AC 100-240V, 50/60Hz

Power Consumption: 120W

Light Sources: 7 Multi-chip 4in1 RGBW 15 Watt LED sources

Beam Angle: 4°

Control

DMX Channel: 12/15/39 Channel

Control Modes: DMX512, Auto, Master-Slave, Music

Pan/Tilt

Continuous PAN and TILT rotation

Pan/Tilt Resolution: 16 bit

Construction

Display: LCD Display

DMX In/Out socket: 3-pin XLR sockets

Power Socket: Powercon in

Protection Rating: IP20

Features

85% optic efficiency

High-efficiency 67 mm PMMA optics

Continuous PAN and TILT rotation

Flicker free sources management, suitable for TV applications and all video

High-resolution stepper motors operated via microprocessors ensure extreme accuracy and smooth movements.

Variable strobe effects

Size

Dimension: 58*17*25cm

Packing Size:640*320*245MM

Weight

Net Weight: 9Kgs

Gross Weight: 11Kgs

3.How to Control The Device

The DMX512 is widely used in intelligent lighting control,with a DMX 512 controller.connect several lights together,dmx in and dmx out, 3 pin XLR connectors: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+)

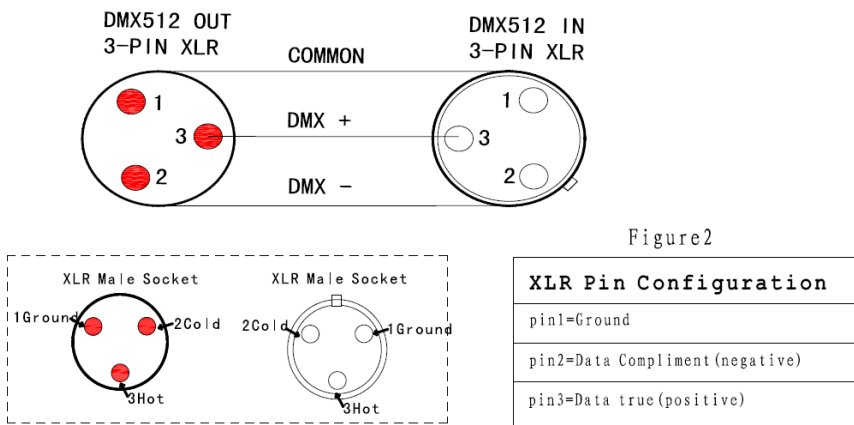


Figure2

Display:

| | |
|-------|--|
| MENU | To select the programming functions |
| DOWN | To go backward in the selected functions |
| UP | To go forward in the selected functions |
| ENTER | To confirm the selected functions |

Set DMX Address Code

1. Press "**Menu**" to "Set DMX Address", and press "**ENTER**" keys to enter into
2. Show "Set DMX Address DMX Address:001", Press the "**UP** and **DOWN**" keys to amended
3. Press "**ENTER**" keys to save and Exit, Press the "**MENU**" Keys does not save and Exit

| | | | |
|----------------|-------------------|----------------|--|
| Address | Address=001 | | |
| Reset | Reset=NO | | |
| | Reset=YES | | |
| Manual | Manual Pan | Pan =000 | |
| | Manual Tilt | Tilt =000 | |
| | Manual Red | Red =000 | |
| | Manual Green | Green =000 | |
| | Manual Blue | Blue =000 | |
| | Manual White | White =000 | |
| | Manual Strobe | Strobe =000 | |
| Mode | 12CH DMX Basic | | |
| | 15CH DMX | | |

| | | | |
|-----------------|----------------------|---------------------|------------------|
| | Stand | | |
| | 39CH DMX Extend | | |
| | Auto Alone | | |
| | Auto Master | | |
| | Music Alone | | |
| | Music Master | | |
| Option | Option Display | Display DelayOff | |
| | | Option Always | |
| | Option Lost DMX | Lost DMX =Clear | |
| | | Lost DMX =Hold | |
| Advanced | Advanced Code | Code =000 | Password =008 |
| | Advanced Adjust | Adjust Pan | Pan =+000 |
| | | Adjust Tilt | Tilt =+000 |
| | Advanced Mic Sens | Mic Sens =080% | |
| View | View Hours | Hours =0000H | Reset H =NO |
| | | | Reset H =YES |

| | | | |
|----------------|------------------|--------------------|--|
| | View DmxValue | CH=001 DMX=000 | |
| | View Version | = 1.00F YYYY.MM | |
| Default | Load Def =NO | | |
| | Load Def =YES | | |

12/15/39 DMX channels mode:

| Mode/Channel | | | Value | Function |
|--------------|----------|--------|---------|---|
| Base | Standard | Extend | | |
| 1 | 1 | 1 | | <u>PAN Movement 8bit :</u> |
| | | | 0-255 | Pan Movement |
| * | 2 | 2 | | <u>Pan Fine 16bit :</u> |
| | | | 0-255 | Fine control of Pan movement |
| 2 | 3 | 3 | | <u>TILT Movement 8bit :</u> |
| | | | 0-255 | Tilt Movement |
| * | 4 | 4 | | <u>Tilt Fine 16bit :</u> |
| | | | 0-255 | Fine control of Tilt movement |
| * | 5 | 5 | | <u>Speed Pan/Tilt movement :</u> |
| | | | 0-255 | Speed fast to slow |
| 3 | 6 | 6 | | <u>Pan Continue Rotation :</u> |
| | | | 0-9 | No Function |
| | | | 10-129 | Forward fast to slow |
| | | | 130-135 | Stop |
| | | | 136-255 | Backward slow to fast |
| 4 | 7 | 7 | | <u>Tilt Continue Rotation :</u> |


| | | | | |
|---------|-------------------------------------|----|---------|------------------------------------|
| | | | 0-9 | No Function |
| | | | 10-129 | Forward fast to slow |
| | | | 130-135 | Stop |
| | | | 136-255 | Backward slow to fast |
| 5 | 8 | 8 | | <u>Dimmer :</u> |
| | | | 0-9 | Closed |
| | | | 10-255 | Dimmer from 0%~100% |
| 6 | 9 | 9 | | <u>Strobe :</u> |
| | | | 0-31 | Closed |
| | | | 32-63 | Open |
| | | | 64-95 | Strobe from slow to fast |
| | | | 96-127 | Open |
| | | | 128-159 | Raiden strobe from slow to fast |
| | | | 160-191 | Open |
| | | | 192-223 | Random strobe from slow to fast |
| 224-255 | Open | | | |
| 7 | 10 | 10 | | <u>LED Macro :</u> |
| | | | 0-9 | No Function |
| | | | 10-75 | Static macro |
| | | | 76-95 | Dynamic macro 1 from slow to fast |
| | | | 96-115 | Dynamic macro 2 from slow to fast |
| | | | 116-135 | Dynamic macro 3 from slow to fast |
| | | | 136-155 | Dynamic macro 4 from slow to fast |
| | | | 156-175 | Dynamic macro 5 from slow to fast |
| | | | 176-195 | Dynamic macro 6 from slow to fast |
| | | | 196-215 | Dynamic macro 7 from slow to fast |
| | | | 216-235 | Dynamic macro 8 from slow to fast |
| 236-255 | Dynamic macro all from slow to fast | | | |
| 8 | 11 | 11 | | All Red : [LED Macro Valid] |
| | | | 0-255 | Red Color (0%~100%) |

| | | | | |
|----|----|----|-------|--|
| 9 | 12 | 12 | | All Green : [LED Macro Valid] |
| | | | 0-255 | Green Color (0%~100%) |
| 10 | 13 | 13 | | All Blue : [LED Macro Valid] |
| | | | 0-255 | Blue Color (0%~100%) |
| 11 | 14 | 14 | | All White : [LED Macro Valid] |
| | | | 0-255 | White Color (0%~100%) |
| * | * | 11 | | Red LED-array 1: [CH10 Invalid] |
| | | | 0-255 | Red Color (0%~100%) |
| * | * | 12 | | Green LED-array 1: [CH10 Invalid] |
| | | | 0-255 | Green Color (0%~100%) |
| * | * | 13 | | Blue LED-array 1: [CH10 Invalid] |
| | | | 0-255 | Blue Color (0%~100%) |
| * | * | 14 | | White LED-array 1: [CH10 Invalid] |
| | | | 0-255 | White Color (0%~100%) |
| * | * | 15 | | Red LED - array 2 : |
| | | | 0-255 | Red Color (0%~100%) |
| * | * | 16 | | Green LED - array 2 : |
| | | | 0-255 | Green Color (0%~100%) |
| * | * | 17 | | Blue LED - array 2 : |
| | | | 0-255 | Blue Color (0%~100%) |
| * | * | 18 | | White LED - array 2 : |
| | | | 0-255 | White Color (0%~100%) |
| * | * | 19 | | Red LED - array 3 : |
| | | | 0-255 | Red Color (0%~100%) |
| * | * | 20 | | Green LED - array 3 : |
| | | | 0-255 | Green Color (0%~100%) |
| * | * | 21 | | Blue LED - array 3 : |
| | | | 0-255 | Blue Color (0%~100%) |
| * | * | 22 | | White LED - array 3 : |
| | | | 0-255 | White Color (0%~100%) |

| | | | | |
|---|---|----|--------|-------------------------------------|
| * | * | 23 | | <u>Red LED - array 4 :</u> |
| | | | 0-255 | Red Color (0%~100%) |
| * | * | 24 | | <u>Green LED - array 4 :</u> |
| | | | 0-255 | Green Color (0%~100%) |
| * | * | 25 | | <u>Blue LED - array 4 :</u> |
| | | | 0-255 | Blue Color (0%~100%) |
| * | * | 26 | | <u>White LED - array 4 :</u> |
| | | | 0-255 | White Color (0%~100%) |
| * | * | 27 | | <u>Red LED - array 5 :</u> |
| | | | *0-255 | Red Color (0%~100%) |
| * | * | 28 | | <u>Green LED - array 5 :</u> |
| | | | 0-255 | Green Color (0%~100%) |
| * | * | 29 | | <u>Blue LED - array 5 :</u> |
| | | | 0-255 | Blue Color (0%~100%) |
| * | * | 30 | | <u>White LED - array 5 :</u> |
| | | | 0-255 | White Color (0%~100%) |
| | | 31 | | <u>Red LED - array 6 :</u> |
| | | | 0-255 | Red Color (0%~100%) |
| | | 32 | | <u>Green LED - array 6 :</u> |
| | | | 0-255 | Green Color (0%~100%) |
| | | 33 | | <u>Blue LED - array 6 :</u> |
| | | | 0-255 | Blue Color (0%~100%) |
| | | 34 | | <u>White LED - array 6 :</u> |
| | | | 0-255 | White Color (0%~100%) |
| | | 35 | | <u>Red LED - array 7 :</u> |
| | | | 0-255 | Red Color (0%~100%) |
| | | 36 | | <u>Green LED - array 7 :</u> |
| | | | 0-255 | Green Color (0%~100%) |
| | | 37 | | <u>Blue LED - array 7 :</u> |
| | | | 0-255 | Blue Color (0%~100%) |

| | | | | |
|----|----|----|---------|-------------------------------------|
| | | 38 | | <u>White LED - array 7 :</u> |
| | | | 0-255 | White Color (0%~100%) |
| 12 | 15 | 39 | | <u>Function :</u> |
| | | | 0-24 | No function |
| | | | 25-49 | Reset (5 second) |
| | | | 50-74 | No function |
| | | | 75-99 | No function |
| | | | 100-124 | No function |
| | | | 125-149 | No function |
| | | | 150-174 | Auto run |
| | | | 175-255 | Music Control |

4. Diagram

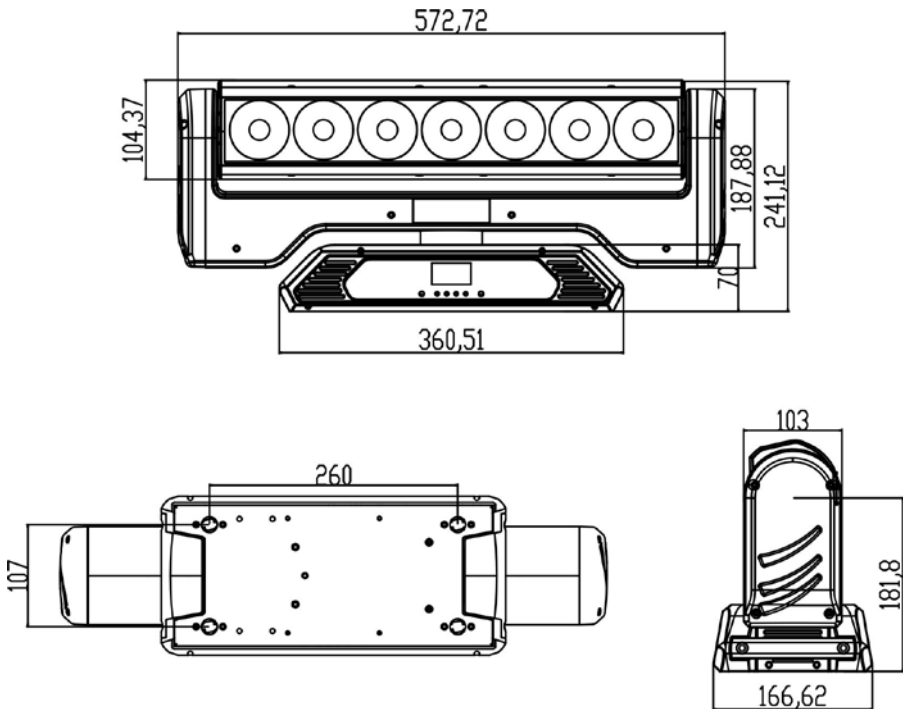

5. Trouble Shooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

a. The unit does not work, no light and the fan does not work

1. Check the connection of power and main fuse.
2. Measure the mains voltage on the main connector.
3. Check the power on LED.

b. Not responding to DMX controller

1. DMX LED should be on. If not, check DMX connectors, cables to see if link properly.
2. If the DMX LED is on and no response to the channel, check the address settings and DMX polarity.
3. If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the unit or the previous one.
4. Try to use another DMX controller.
5. Check if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.

c. One of the channels is not working well

1. The stepper motor might be damaged or the cable connected to the PCB is broken.
2. The motor's drive IC on the PCB might be out of condition.

6. Fixture Cleaning

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

- **Clean with soft cloth using normal glass cleaning fluid.**
- **Always dry the parts carefully.**
- **Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.**